
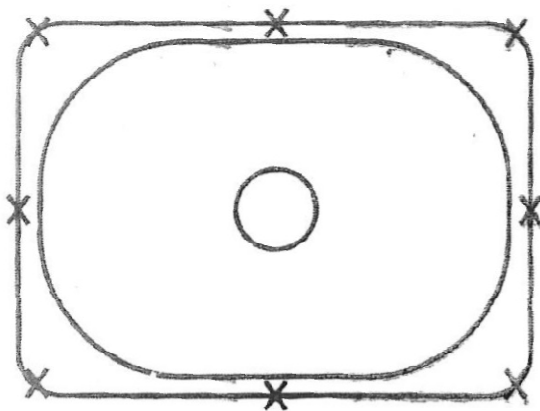



UNDERMOUNT INSTALLATION INSTRUCTIONS WITH 5EUMH UNDERMOUNT CLIPS

- Vance Undermount Sink Clips provide proper and secure installation for a variety of sink types and sizes.
- Includes everything you need for standard undermount installation.
- 10 each -- clips, screws, wing nuts, washers, and brass ferrules.
- For larger sinks, it is recommended that you use additional clips.

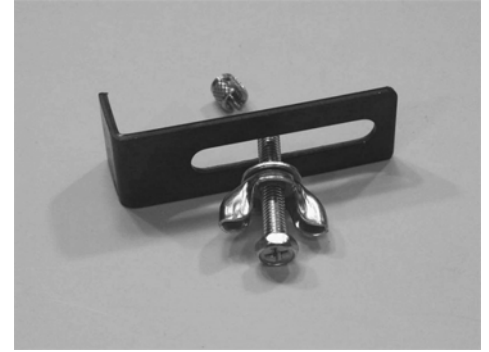

Bottom View of Sink

- 1 On underside of top, locate eight points around bowl approximately 1 inch from bowl flange. Recommend use of minimum of eight clips for a tighter installation.
- 2 Drill eight holes 1/4" x 1/4" at marked location for brass inserts.
- 3 Tap in brass inserts, slotted end first.
- 4 Next, with bowl face up, clean top of bowl flange and underside of top around cutout with denatured alcohol.

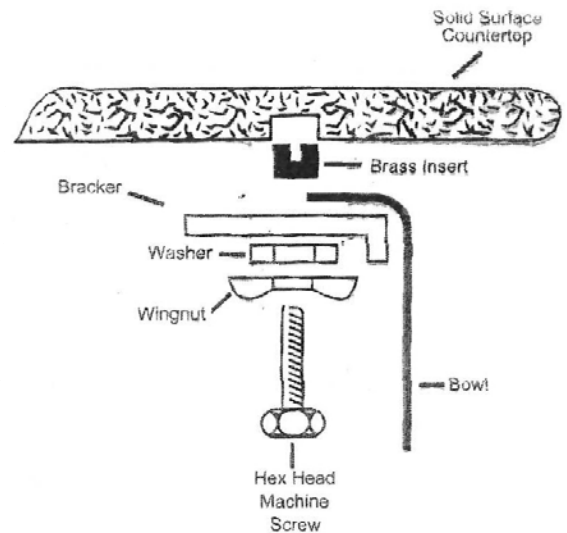

- 5 Apply a narrow bead of silicone caulk to top inside edge of bowl flange and position bowl.
- 6 Mount hardware by first threading wing nut well up on screw near the head. With washer and slotted clip in place, tighten screw securely to lock in brass insert.
- 7 When bowl is correctly positioned over cutout, tighten wing nuts to secure bowl.
- 8 Remove excess sealant from inside lip.



VANCE INDUSTRIES, INC. 5617 West Howard Street • Niles, IL 60714

Phone: (847) 983-0960 • Fax: (847) 983-0992 • E-mail: sales@vanceind.com • Website: www.vanceind.com