


VANCE BUILT-IN SURFACE SAVER INSTALLATION INSTRUCTIONS

1 DETERMINE LOCATION

Caution! DO NOT INSTALL ABOVE DISHWASHER


Examine the surface under the counter for interference by bracing or cross members. Area must have additional 3/4" space around cut-out for fastening lugs.

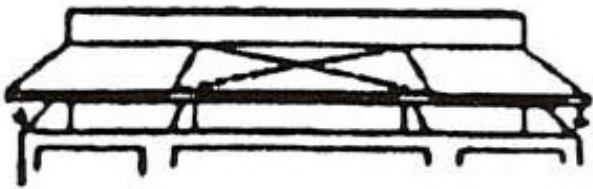

2 SCRIBE & CUT COUNTERTOP

Place the frame on the countertop, vertical flange down. Draw line around the outside of the flange, not around the top of rim.


Use one starting hole and make the cutout with a keyhole saw.

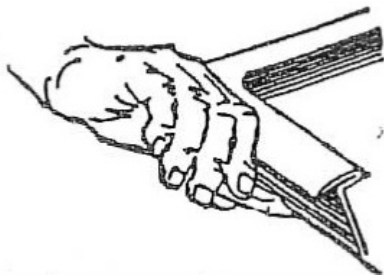

**SCRIBE AGAINST
LEG AS SHOWN --
NOT THE TOP RIM**


3 PREPARING FRAME FOR INSTALLATION

Apply caulking under both sides of frame and place over cutting board. Make sure to install tempered glass cutting board with textured side facing up.

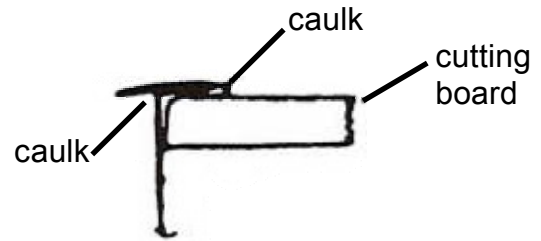

4 INSTALLING CUTTING BOARD

Place cutting board and frame in cutout. Place plastic bolt pads over tip of each bolt. Attach one lug close to each corner. Evenly space remaining lugs, keeping them at least 2" away from weld. Do not over tighten.

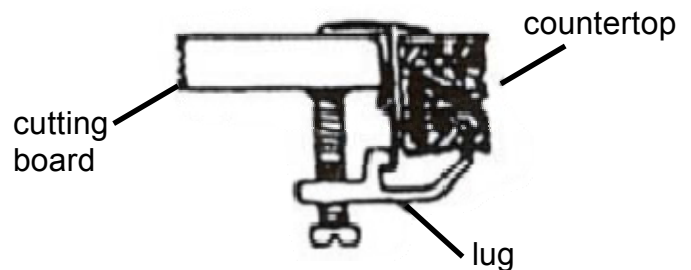

WARRANTY

Vance promises to replace within one year from date of purchase, any Surface Saver® exclusive of labor, that breaks from temperature extremes or whose surface becomes scratched or marred under normal household use.



VANCE INDUSTRIES, INC. 5617 West Howard Street • Niles, IL 60714

Phone: (847) 983-0960 • Fax: (847) 983-0992 • E-mail: sales@vanceind.com • Website: www.vanceind.com